




Assembly of C-channel frame step-by-step


Step 1

Lay out parts on a clean surface. The attachment brackets can be fitted to the C-channel before the frame is assembled

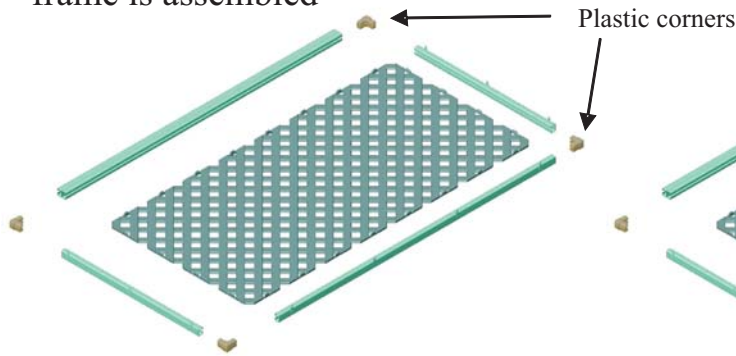


Step 2

Slide the top C-channel onto lattice over the tabs.

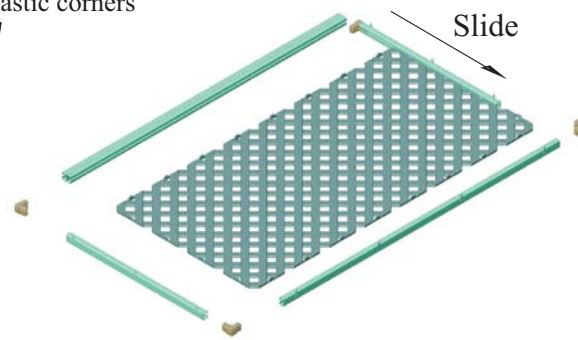


Step 3

Insert a plastic corner into each end of the top C-channel and tap in lightly.

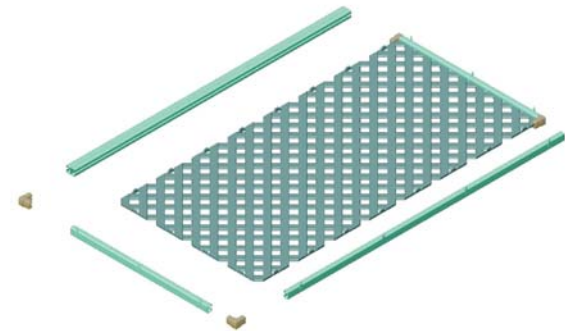


Step 4

Slide the side C-channel over the tabs up to the moulded corner and tap in lightly.

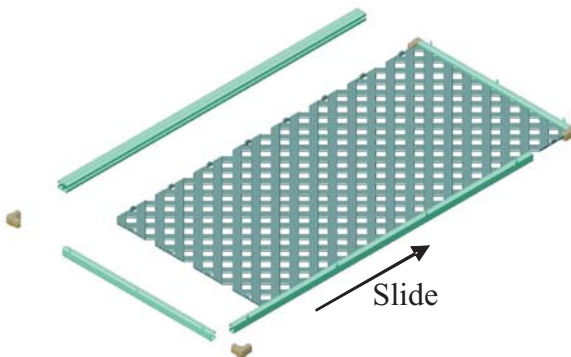

Step 5

Slide on the other side C-channel as per step 4.

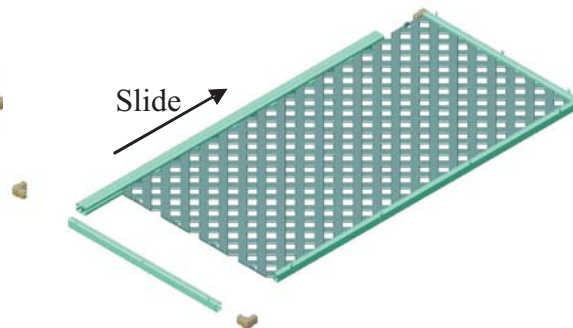

Step 6

Remove the tabs from the bottom of the lattice, then insert the plastic corners into each end of the bottom C-channel and tap in lightly

